

63 12 090 Removing/installing complete headlight

+ 63 12 636


Preparatory work

Removing windscreen
Removing left side panel
Removing left speaker cover
Removing left front-fairing panel
Removing left mirror
Removing top trim panel, left
Removing right side panel
Removing right speaker cover
Removing right front-fairing panel
Removing right mirror
Removing top section of fairing, right
Removing cover for windscreen adjuster
Disengaging windscreen adjuster
Removing centre top section of fairing


Core activity


(-) Removing headlight

- Remove cable tie (arrow).
- Disconnect plug (1) for the headlight.
- Remove lock washers (2).

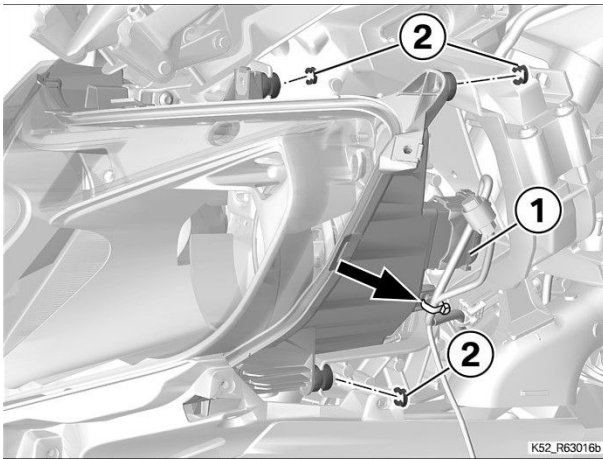


- Remove lock washers (1).

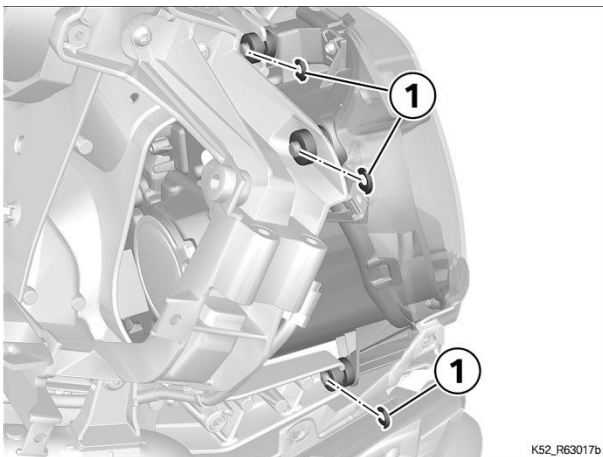

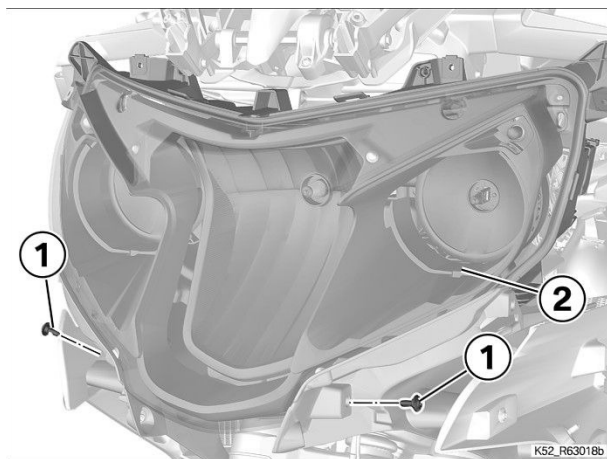


- Remove screws (1).
- Remove headlight (2).


(-) Installing headlight

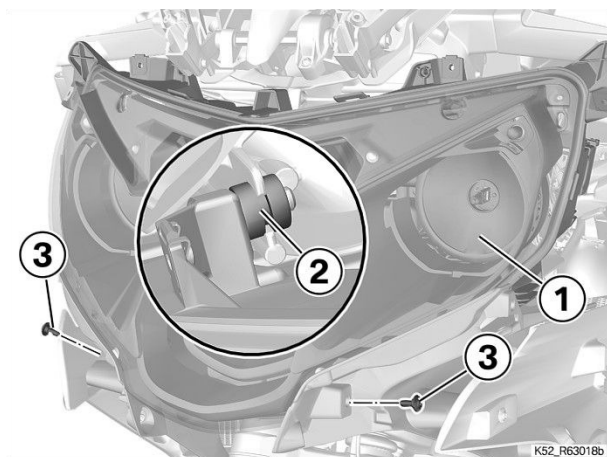

- Hold headlight (1) in position and push it into grommets (2).
- Install screws (3).

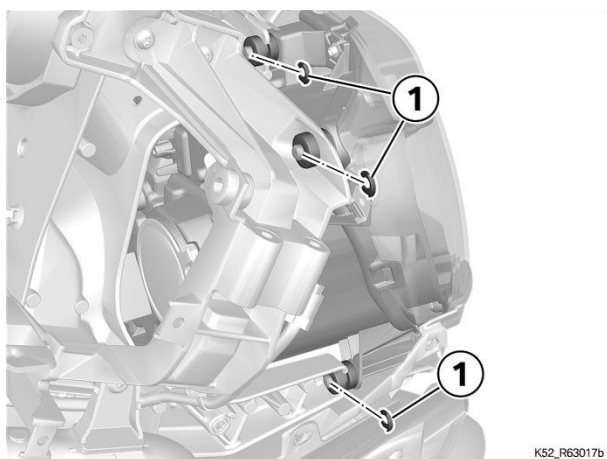

- Install lock washers (1).

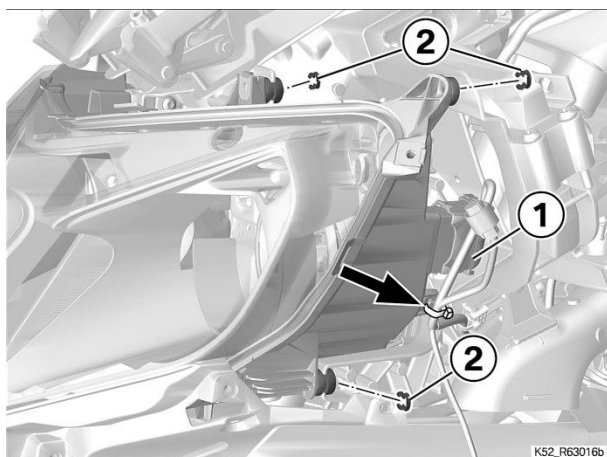

- Install lock washers (2).
- Connect plug (1) for the headlight.
- Install the cable tie (arrow).

Follow-up work

Installing centre top section of fairing
Securing windscreen adjuster
Installing cover for windscreen adjuster
Installing top section of fairing, right
Installing right mirror
Installing right front-fairing panel
Installing right speaker cover
Installing right side panel
Install the top section of fairing, left
Installing left mirror
Installing left front-fairing panel
Installing left speaker cover
Checking headlight beam throw
Installing left side panel
Installing windscreen
Final check of work performed